


REAR END

- 1 Lift car with jack and place car on jack stands.
- 2 With the jack, lift on the metal end of the spring to relieve tension. Do not lift from the fiberglass portion of the spring.
- 3 Remove the clip at the top of the spring bolt, use wrenches to remove the bolt.
- 4 Replace stock bolt and bushings with supplied bolt and bushings.

FRONT END

- 1 Lift car with jack and place car on jack stands.
- 2 With the jack, lift near the end of the spring to relieve tension.
- 3 Tighten the end bolt to desired height or until the bolt bottoms out.

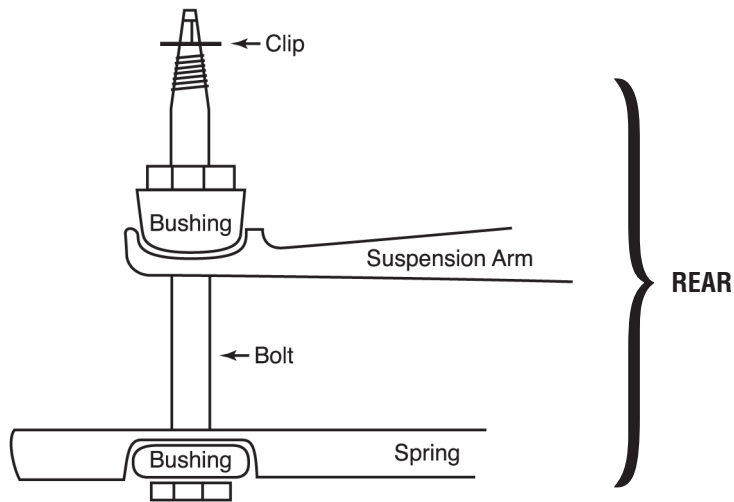

- For more detail, see project #32 in the Motor Books "Corvette C5 Performance Projects 1997-2004" book (CC# 115012).

PART NO. 585203 SHEET 1 OF 1



DATE	REVISION	AUTH	DR
7/16/2008			

INSTALLATION INSTRUCTIONS

PART NO. 585203 SHEET 1 OF 1